



**Pocket Candy
Operation Guide**



Congratulations on the purchase of your Xtatix product. Before using the player, be sure to note the following recommendations:

- Never try to disassemble the player.
- Never beat, strongly shake, or abuse player.
- Do not expose player to the following conditions: high heat, extreme cold, dusty, or humid places.
- Use dry cotton cloth to clean the player.
- Do not use chemical or liquid cleaners on the product.
- Contact the place of purchase if you have trouble with the player.
- Do not try to fix the player yourself.
- If formatting the player select the FAT option.
- Check the HOLD switch if player is not responding to your commands.
- Replace the battery if:

“Low Battery” indicator appears.

Player turns on briefly and then shuts off.

There is no response to pressing buttons and you’ve already checked the HOLD switch.

When not using the Player for long periods of time, remove the battery to avoid possible damage caused by electrical leakage.

Accessories

Stereo Earphones

USB Cable

CD-ROM

Neck strap

1 AAA Battery

Table of Contents

A. Product Preview

Features

Function Buttons & screen

Function Menu

B. Basic Operation

Turning On the Player

Turning Off the Player

Operating in Music Mode

Operating in Voice Record Mode

Operating in Voice Playback Mode

Operating in FM Tuner Mode

Using DEL Music File Mode

Using DEL Voice File Mode

Using Setting Mode

Using About Mode

Connect with PC

Installing the Driver (For Win98/SE Only)

Formatting the player

C. Additional Information

Safe Removal Procedure

Trouble Shooting

D. Product Specifications


A. Product Preview

Features


- Plays MP3 and WMA music files.
- Plug N' Play USB Storage Disk
- FM tuner with 20 preset channels
- FM tuner recording function
- Built-in microphone for voice recording function
- Backlit screen
- ID3 tag support
- Lyrics display support
- 9 language Support
- A-B repeat function
- Delete music and voice files on player
- No driver required with Windows ME/2000/XP
- Sigmatel USB 2.0 Controller Chip
- Samsung Flash Chip

Xtatic

Function Buttons

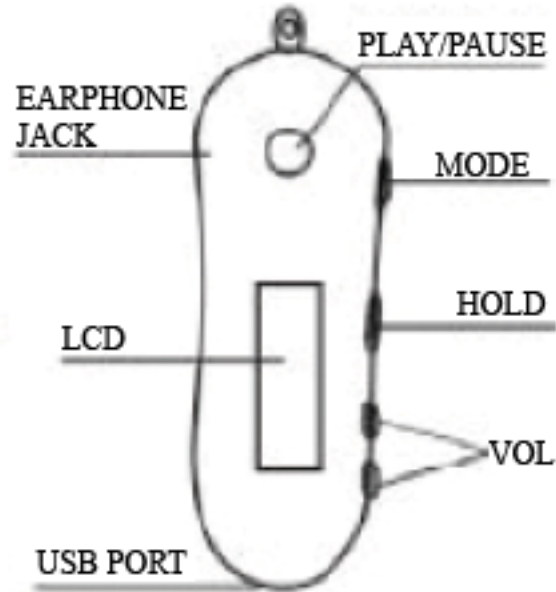

Screen description

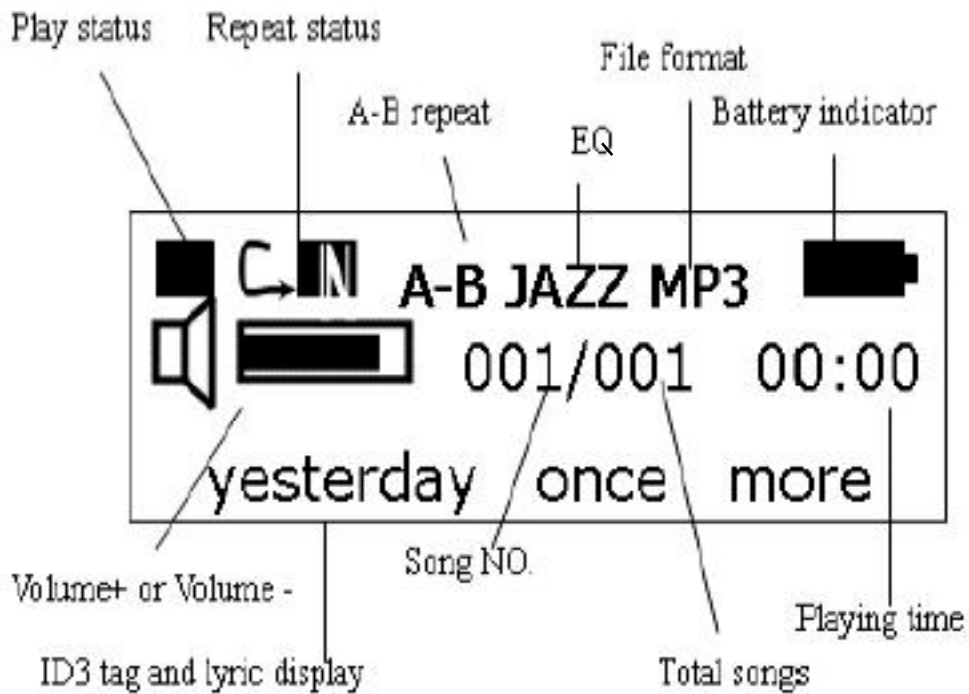

B. Basic Function

Turning on the player:

- Press the PLAY button to turn ON the power. Player is turned on when the screen display and backlight illuminate.

Turning off the player:

- While the Player is on, press and hold PLAY button for 3 seconds to turn OFF the power.

Operating in Music Mode:

- While the Player is power on, press the PLAY button to begin playing music. The screen will display the ID3 tag which shows current song name, artist, and the total songs and the play time of the current song.
- Tap the MODE button forward or backward to scroll to the song which you want to play.
- Hold the MODE button forward or backward to fast forward or fast rewind within the song playing.
- While playing music, press PLAY button once to pause playback.

Changing Volume

- Increase (+) and decrease (-) the volume by pressing the volume control buttons. The screen displays the volume level.

Using A-B Repeat function

- While playing, press the MODE button once to select Point A of the repeat segment, "A-" will show on the upper left corner of the screen.
- Press the MODE button once to select Point B.
- The music will repeat play between Point A and Point B. Press the Mode button a third time and the segment repeat will be cancelled.

Operating in Voice Record Mode

- While no music is playing press the MODE button straight back to activate the main menu.
- Scroll the MODE button forward or backward to highlight the Record Menu
- Press MODE button once to start recording.
- The screen will display the record file name and the recording time and the remaining recording time.
- Pause the recording by pressing the PLAY button once. Press the PLAY button again to resume the recording.
- Stop the recording by pressing the MODE button once.
- Play back the record file by pressing the PLAY button once.
- After finished recording activate the main menu by pressing the MODE button once to select other menu or select the Music menu to return to music playback function.
- Note: While recording, only PLAY, Hold and MODE buttons are active.

Operating in Voice Playback Mode:

- Press and hold the MODE button for 2 seconds to activate the main menu.
- Scroll the MODE button forward or backward to highlight the Voice menu.
- Press the MODE button when the Voice menu is highlighted.
- Scroll MODE button forward or backward to select the recorded file you want to play.

Operating in FM Tuner Mode

- While no music is playing press the MODE button to activate the main menu.
- Scroll the MODE button forward or backward to highlight the “FM” Tuner menu.
- Press the Mode button to start using the FM tuner.
- During the first time entering the FM mode, the player will automatically SCAN the stations and store the functioning stations. When scanning is finished, the player will return to the RADIO mode and show CH01 and its corresponding frequency.



You can scroll through the frequencies by toggling the MODE button forward and backward.

Operating in FM Radio Mode

- In the FM tuner mode, press the MODE button until the screen displays the Radio icon, press the PLAY button to activate.
- Scroll the MODE button forward or backward to select the previous channel or the next channel.

Scan the Channel

- In the FM tuner mode, press the MODE button until the screen displays the Scan icon, press the PLAY button to enter.
- You can select this function to auto scan the all the FM band frequencies and store the functioning stations with sequential channel numbers and its corresponding frequencies.

Delete Music

- While not playing music press MODE button to activate the main menu.
- Scroll the MODE button forward or backward to highlight the Del menu.
- Press the MODE button again to activate.
- Scroll the MODE button forward or backward to highlight the Music menu.
- Press the MODE button to activate.
- The screen will display the music file name you want deleted.
- Scroll the MODE button forward or backward to select the music file that will be deleted.
- Press the MODE button once to activate the delete confirmation screen.
- Press the PLAY button to confirm delete this file or press MODE button once to cancel deleting this file.
- Press VOL+ or VOL- button to exit the delete operation mode and return to the main menu.

Delete Recording

- While no music is playing press the MODE button to activate the main menu
- Scroll the MODE button forward or backward to highlight the Del menu.
- Press the MODE button to activate.
- Scroll the MODE button forward or backward to highlight the Voice menu.
- Press the MODE button to activate.
- The screen will display the voice file name which will be deleted.
- Scroll the MODE button forward or backward to select the voice file you want deleted.
- Press the MODE button once to activate the delete confirmation screen.
- Press the PLAY button to confirm delete this file or press MODE button once to reserve this file.
- Press VOL+ or VOL- button to exit the delete operation mode and return to the main menu.

Settings Mode

- While no music is playing press the MODE button to activate the main menu.
- Scroll the MODE button forward or backward to highlight the Settings menu.
- Press MODE button to activate.
- There are 8 sub-menus in the Settings menu which are listed below:
 1. EQ Settings: Normal, Pop, Classical, Pock, Jazz
 2. Play Mode Settings: Normal, Repeat One, Repeat All, Shuffle,
 3. Preview
 4. Contrast Settings: Adjust the screen contrast (darkness).
 5. Backlight Settings: Set the length of backlight time to 0-60 seconds.
 6. Auto-Shut Off Settings: disable, 1 min, 2mins, 5mins, 10mins

7. Record Setting: Choose quality of recording. Higher quality means less recording time.
8. Language Settings
9. Exit the Settings menu.

About Information

- While music is not playing press the MODE button to activate the main menu.
- Scroll the MODE button forward or backward to highlight the About menu.
- Press the MODE button to activate.
- The screen will display as below:

About

Ver: 002.511.xxx which is the player's firmware version.

INT: XX MB which is the total memory capacity.

Free Space: XX MB which is the free memory space.

Connect with the PC

- Use a USB cable to connect with the PC.
- The player will power on. A connected picture will be shown at the screen of the player.
- The player functions as a portable disk, it can download/upload any file.

Installing the Driver

- Only pre-2002 Operating Systems need the driver installed.
- Insert the Xtatix CD into the CD-ROM
- Plug the player into the PC USB port by the USB cable.
- OS will prompt that it found a new device and will search for its driver, select CD-ROM drive to search for driver.
- Click "Next" Button to finish the installation.
- Click "Yes" button to reboot the PC.

Caution:

Do not unplug the Player while it is downloading file(s). It will be harmful to the Player.



- If the Player doesn't work properly try taking out the battery and reinsert the battery after 3 seconds. If problems persist try new battery.

Formatting the player

- The player can be formatted the same as a hard disk. Choose the FAT option for formatting.

C. Additional Information Safety Removal Procedure

- To protect the data, please remove the player as instructed below:
- Double click the "Safe removal" icon on the system tray. The
- "Unplug or Eject Hardware" window will be pop up. Select the device you want to remove, and then click the "STOP" button.
- When prompted it's safe to remove the device, you can unplug the device from the USB port.
- *Do not unplug the player turning data transfer.*

D. Product Specifications

USB Port: Sigmatel USB2.0 controller

Transfers Rate: more than 900Kbps

Record Format: IMPCM, MSPCM, PCM

Record time: Up to 70 hours for 1GB

Support format: MP3/WMA/WAV

Output frequency: 20 Hz~20 KHz

Power: 1pcs AAA alkaline battery.

Play time: Over 10 hours

Earphone Output: 5mw + 5mW