



PORTADRIVE™ Operation Manual

I. System Requirement

Standard USB port, Windows98 SE/ME/2000/XP,MAC operation systems.

II. Explanation of USB Hard Disk Indicator

Red: Flask indicating that hard disk is reading and writing

III. Instruction for Operation

1. Installation into Windows98 SE Operation System

- (1) Place the hard disk into the hard disk box and then connect the box to computer.
- (2) When Windows find new Hardware and enter into Guide for Adding New Hardware, click "NEXT".
- (3) Click "Search latest driver for the equipment" and click "NEXT".
- (4) Put driver disk into CD-ROM and click "Search CD-ROM driver" and click "NEXT".
- (5) Click "NEXT" in each of the following steps and finally click "Finish".
- (6) Reboot the computer and USB hard disk will appear in "My Computer".

2. Installation into Windows ME/2000/XP Operation System

Driver is not necessary for these three operation systems. Just connect the USB hard disk to computer, click "My Computer" after a moment and the USB hard: disk icon will appear.

IV. Hard Disk Partition

Prior to normal use, a new hard disk must be partitioned and formatted following the steps below:

1. Windows 98 SE/ME

- (1) Connect USB hard disk to the computer and make sure that it is recognized correctly.
- (2) Get into "MS-DOS" mode.
- (3) Type "FDISK" and press "Enter".
- (4) Partition hard disk according to the prompts.

2. Windows2000/XP

Connect USB hard disk to the computer. When it is recognized, click "START" => "CONFIGURATION" => "CONTROL" "PENAL" => "MANAGEMENT TOOL" => "COMPUTER MANAGEMENT" wait until a window appears and you can see that hard disks of the computer in the list on the right, You can find the USB hard disk among them. Right-click in the status area of the window and follow the prompts.

V. Correct Use of USB Hard Disk

1. Connecting

Connect the USB hard disk to the USB port of the computer, wait a moment and you can see a USB hard disk icon added to "My Computer".

2. Disconnecting

On Windows98 SE, you can disconnect the USB hard disk when the red indicator stops flashing. On Windows2000/XP, click hot plug-in-and-out icon on the right of the status area first, select USB hard disk in popup dialog box and left click. Wait until a dialog box saying "Hardware safely removable" and then you can disconnect the USB hard disk.

VI. Trouble Shooting

In case that you can not find USB hard disk in the computer with normal operation, please click "MY COMPUTER=> "CONTROL PENAL" => "SYSTEM" => "EQUIPMENT MANAGER" to see if there is an item of "universal serial bus controller". If not, reboot the computer, get into CMOS setting and set "ON CHIP USB" as "ENABLED" either at "CHIPSET FEATURES SETUP" or at "INTEGRATED PERIPHERALS".

VII. Technical parameter of USB Hard Disk

Operating Voltage: 5V

Environmental Temperature: 10~40°C

Operating Current: 5000mA

Environmental Humidity:8~90%