

INSTRUCTION MANUAL FOR

Xtatix Placid Laser Mouse (XCM-L51)



Connecting your Mouse

Your Xtatix Mouse uses a USB interface to connect with your computer.




USB Connection

With your computer turned on, plug the rectangular Universal Serial Bus (USB) connector into your computer's USB port.

If running WinXP or Mac OS 10.1+ the mouse will automatically begin functioning momentarily after connection.

Using your Mouse

Your new mouse has 2 buttons and one scroll wheel.

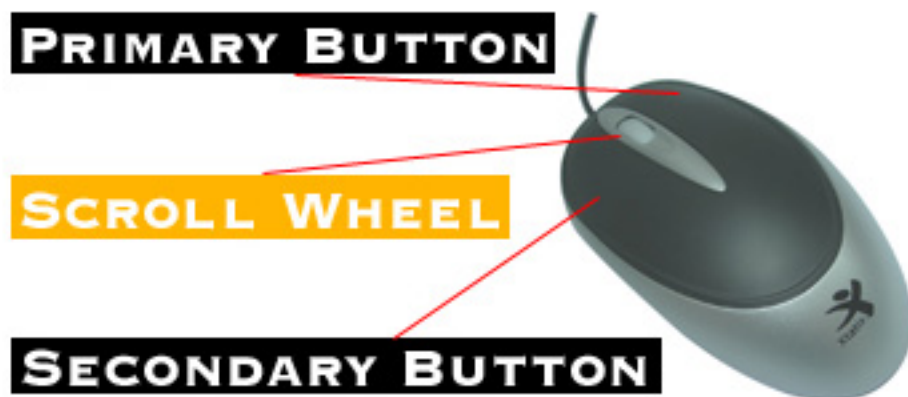

The Primary and Secondary Buttons

Press the primary button to click and double-click.

Press the secondary button to display shortcut menus or other program specific features, which vary according to the program.

The Wheel and the Wheel Button

Using the wheel, you can move around in a scrollable document, similar to clicking the scroll arrows or using the PAGE UP and PAGE DOWN keys.

Roll the wheel toward you to move down in a scrollable document and roll the wheel away from you to move up in a scrollable document.

Use the wheel button to scroll up and down in a page that extends the length of the computer screen. Press the wheel button and observe the position of the origin mark that appears on the screen, and then move the pointer in the direction that you want to scroll. The farther you move the pointer away from the origin mark, the faster the document scrolls. To stop scrolling, press a pointing device button or press a key on the keyboard.